

Lesson 3 APP Custom

1. Project Outcome

Perform the action group file “20” programmed in “Lesson 2 Action Programming” by the custom function of the mobile APP.

2. Complete Program

2.1 Preparation


- 1) Confirm that Bluetooth and GPS service have been enabled.
- 2) Confirm that No.20 action group has been successfully downloaded into the controller (the download is successful, the PC software will prompt).

2.2 Operation steps


Step 1: Switch on the robotic arm, and then open “Wonderbot”.

Step 2: Refer to the operation steps in “2.Remote Control /Lesson 2 Mobile App Control” to connect the device

Step 3: Enter “Robot remote control” interface.

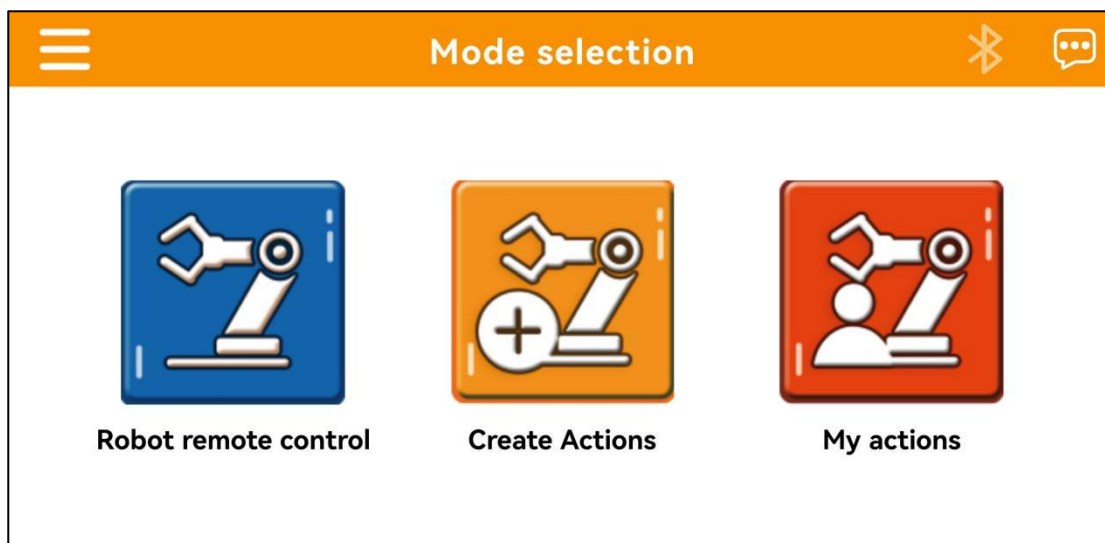


Step 4: Click “Action Groups ” button on the home interface, and click "add" in the pop up interface.

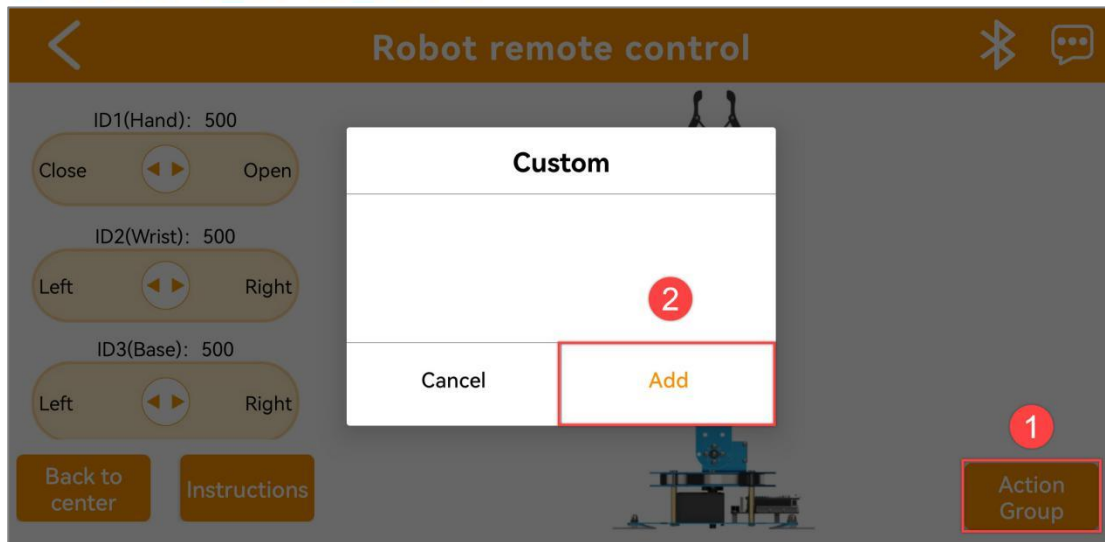


Step 5: Fill in the action group name and action group number in the pop-up interface.

Note: The action group name can be filled in arbitrarily, but the action group number must be filled in correctly, otherwise it cannot be realized.

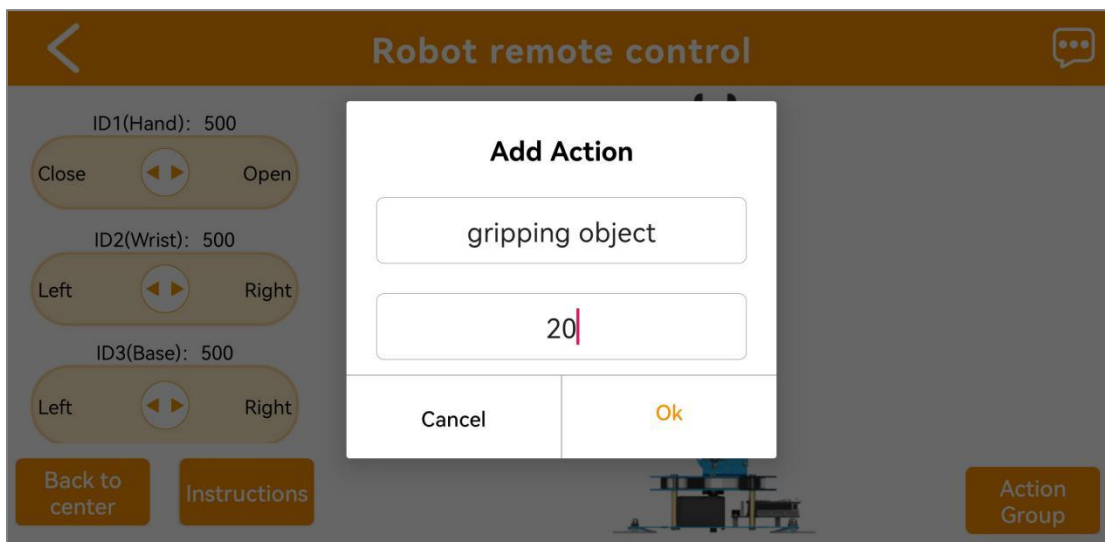

Step 6: After adding, click the action group name to execute it once.

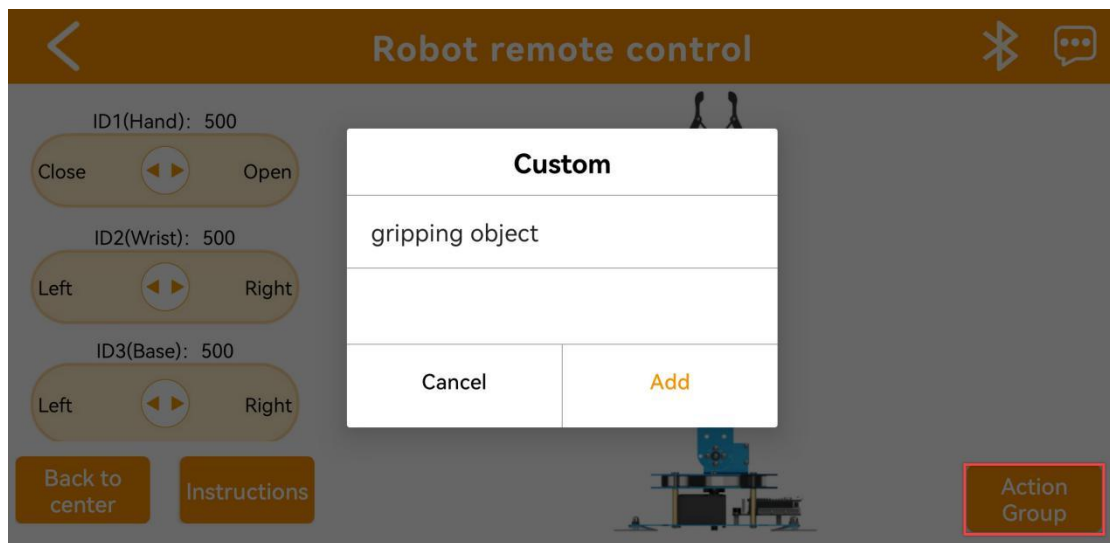

Step 7: If you need to modify or delete action group, slide or long press the action name button and click “Delete”.

